

HANDI-MARK II

5800131, 10/1/2018



Handi-Mark II Replacement Parts

1785851	Die Wheel Assembly
1785867	Spring & Retainer Assembly

Foam Ink Cartridges for Non-Porous Surfaces

1785213	Cartridge, Foam HM-II Uninked*
---------	--------------------------------

Coder Service:

1. Loosen Thumb Screw & move the Cover to position shown.
2. Remove retainer from Ink Cartridge Shaft.
3. Die Wheel may be removed to mount type.
4. Ink Cartridge may be removed for re-inking.
5. Replace all items & close Cover.
6. Adjust the Ink Cartridge to the Die Wheel by turning the Cartridge Shaft Screw. The shaft will automatically hold in place after adjustment.
7. Adjust the Ink Cartridge for even inking of type (side to side) by loosening the Shaft Support Screws & moving as needed.

* See Distributor for type of ink to use for specific applications